
 


Operation

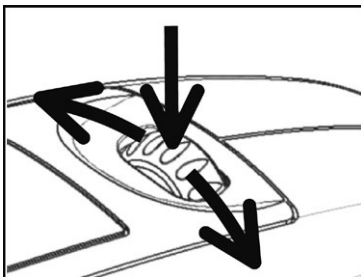


mode wheel:

- Switch on
 - Show menu
 - Select function
 - Activate function
- press
press
scroll
press



operate-button:

- Measure

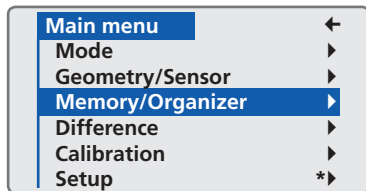

Navigation Symbols:

- ◀ Back to previous menu
- ▶ Got to sub-menu
- ✓ Function activated
- * Guide to language menu

Please note: The software smart-chart for data analysis and the detailed operating manual are available for download from the support section at: www.byk.com/instruments



How to calibrate?

Gloss

Autodiagnosis

Please clean standard

Confirm → [mode]
Cancel → [operate]

- Turn on the unit in holder
- Autodiagnosis checks standard and calibration
- If requested, clean the standard and start calibration by pressing the mode wheel

Note: Do not clean the standard with acetone!
For cleaning information see operating manual.

Thickness (only micro-TRI-gloss μ)

Main menu	
Calibration	▶
Calibrate	▶
Thickness Fe	▶
Thickness NFe	▶

- Select the desired sensor (Fe or NFe)
- Put the unit on the zero standard or original substrate*
- Press operate button
- Hold the unit free in air and press operate

*It is advisable, to perform the zero calibration on the uncoated metal of the sample to be tested.

How to measure?

Main menu
Mode
Sample mode
Statistics
Continuous
Basic mode
Advanced mode

- **Select measurement mode:**
 - Measurement without statistical evaluation
 - Multiple measurement with statistics
 - Continuous measuring with adjustable interval
 - Measuring without statistics/saving/difference
 - Reactivates all menus and functions when Basic mode was activated

How to save?

Main menu
Memory
Memory
Select memory
Create memory
Delete memory
Display memory
Select organizer

- **Select Memory and activate the desired function:**
 - Turn saving on/off
 - Select a memory from list
 - Enter up to 50 memories
 - Delete memory content or memory name
 - Recall memory content (use scrollwheel)
 - Select organizer which was transferred with smart-process software

Display example:

MEMORY 001	SAMPLE 012		
	n = 02/03		
	value	\bar{x}	stdev
20°	69.3	68.7	2.3
60°	88.2	87.8	0.9

Memory	✓
Statistics	✓

How to use an Organizer?

Select parameter 1	←
Model 1	
Model 2	
Model 3	

Model 3	Hood Mid
	n = 02/03
	\bar{x}
20°	86.1
60°	92.7

An organizer is a predefined sampling procedure that needs to be downloaded from the software smart-process.

- Select style (Par1), color (Par2), paint line (Par3)
- Press operate to measure the first measurement zone
- After a measurement zone has been completed, press operate to move to the next zone
- To skip a measurement zone, press the mode wheel and select "Interrupt checkzone".

Note: "Interrupt" must be activated in the organizer!

How to change settings?

Main menu
Setup

- **Select menu Setup to change:** Language, Switch-off time, Clock, Beeper